

# Active™

## 1.25mm Pressure Washer Foam Cannon

### Instructions Document

Congratulations on the purchase of your new ACTIVE™ foam cannon. In order to ensure you have the best possible experience, please read through the following instructions. If you require any help, please contact the customer service department at:

[info@active-jobsite.com](mailto:info@active-jobsite.com)

Model No: BE01BR

Version No: 00

# Contents

1. What you get with this package
2. User Instructions
3. Limited Warranty & Support

Model No: BE01BR

Version No: 00

## 1. What you get with this package

- Foam Cannon Nozzle
- High Grip Bottom Bottle – Holds 1 Liter Liquid (1000 ml)
- Suction Tube
- 1.25 mm Orifice – Pre-Installed
- 1.1 mm Orifice – Included (1.1mm orifice is not suitable for Active branded pressure washers or pressure washers above 1.5 GPM flow rate)
- ¼" Male QD Plug
- Foam Cannon Head
- Optional Fan and Pencil Spray Modes Available by Turning Collar on Foam Cannon Head
- Detergent Dial to Control Detergent Volume

Model No: BE01BR

Version No: 00

## 2. User Instructions

Working with a detergent ensures quick soaking of the dirt, and allows the high-pressure water to penetrate and remove the dirt more effectively. Always spray detergent on a dry surface, do not pre-soak the area. Wetting the surface first dilutes the detergent and reduces its cleaning ability.

- Assembly For Use
  1. Detach spray head from the foam bottle
  2. Fill the bottle with the detergent.
  3. Reattach the spray head on to the bottle
  4. Attach the foam blaster onto the spray gun
  5. Apply the detergent to dry work surface from bottom to top
  6. Allow detergent to remain on the surface for a short time before rinsing. Do not allow detergent to dry on the surface.
  7. When you finish, fill with clean water in bottle and spray water for one minute in ON position to rinse the Foam Cannon System

Model No: BE01BR

Version No: 00

- Using the Fan and Pencil Spray Patterns

The Foam Cannon Collar can be twisted clock-wise and counter clock-wise for obtaining either a pencil jet or fan jet spray pattern. Twist the collar to get desired pattern.

- Using The Detergent Dial

The circular knob on top of the foam cannon-head with (+) and (-) markings regulate the level of foam obtained from your foam cannon. Twist all the way to (+) for maximum foaming and (-) for minimal foaming.

- Using The 1.25mm (pre-installed) and 1.1mm (included in package orifices)

The foam cannon comes with a pre-installed 1.25mm foam cannon orifice. In addition, a 1.1mm orifice is provided in the package.

The pre installed 1.25mm orifice is to be used with any Active branded pressure washers or pressure washers with a flow rate of over 1.5 GPM. The 1.1mm orifice is not suitable for Active branded pressure washers and is to only be used with any pressure washer below 1.5 GPM water flow.

Nozzle can be replaced using a 16-wrench.

**Model No: BE01BR**

**Version No: 00**

### 3. Limited Warranty & Support

Always keep your online receipt as proof of purchase. We're here to help! If you have any questions or comments, reach us out on [info@active-jobsite.com](mailto:info@active-jobsite.com)

#### 90 Day Limited Warranty

This product is guaranteed to be free from defects in material and workmanship for 90 days from the date of its original purchase.

If such a defect appears during the warranty period, upon presentation of proof of purchase and damage, Active Products will elect to either replace or refund purchase at its own discretion.

#### What is Not Covered?

The warranty is void if the equipment is used for commercial or rental purposes. This warranty does not cover accidental damage, unreasonable use, and normal wear and tear, use of improper detergents, freezing, neglect, or non-compliance with the operating Instructions.

**Model No: BE01BR**

**Version No: 00**